


## 12. Fuel Injector


### A: REMOVAL

#### 1. RH SIDE

- 1) Remove the collector cover.
- 2) Release the fuel pressure. <Ref. to FU(H6DO)-42, RELEASING OF FUEL PRESSURE, PROCEDURE, Fuel.>
- 3) Disconnect the ground cable from the battery.
- 4) Open the fuel filler flap lid, and remove the fuel filler cap.
- 5) Remove the air cleaner case. <Ref. to IN(H6DO)-5, REMOVAL, Air Cleaner Case.>
- 6) Remove the fuel pipe protector RH.

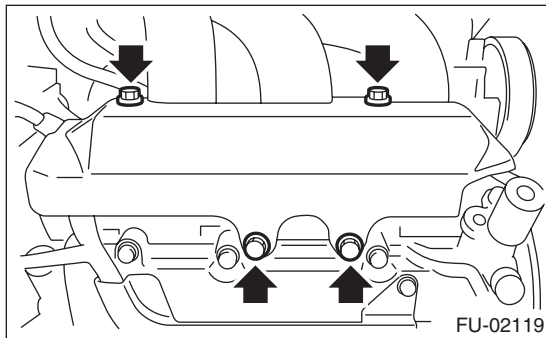

- 7) Disconnect the connector from fuel injector.
- 8) Remove the engine harness from the fuel injector pipe RH.
- 9) Remove the bolts which hold fuel injector pipe onto cylinder head.

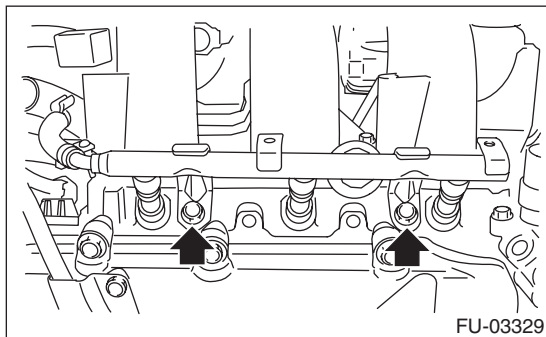


- 10) Remove the fuel injector while lifting up the fuel injector pipe.


#### 2. LH SIDE

- 1) Remove the collector cover.
- 2) Release the fuel pressure. <Ref. to FU(H6DO)-42, RELEASING OF FUEL PRESSURE, PROCEDURE, Fuel.>
- 3) Remove the battery.
- 4) Open the fuel filler flap lid, and remove the fuel filler cap.
- 5) Remove the generator harness from the fuel pipe protector LH.

- 6) Remove the fuel pipe protector LH.

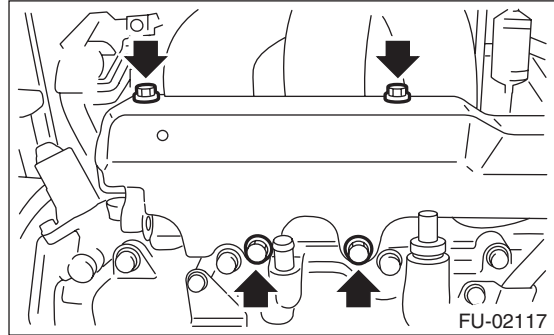

- 7) Disconnect the connector from fuel injector.
- 8) Remove the engine harness from the fuel injector pipe LH.
- 9) Remove the bolts which hold fuel injector pipe onto cylinder head.

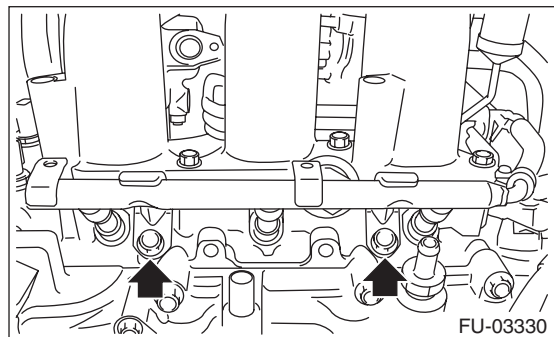

- 10) Remove the fuel injector while lifting up the fuel injector pipe.

# Fuel Injector

## FUEL INJECTION (FUEL SYSTEMS)

### B: INSTALLATION

#### 1. RH SIDE


Install in the reverse order of removal.

NOTE:

Use new O-rings.


**Tightening torque:**

**19 N·m (1.9 kgf-m, 14.0 ft-lb)**

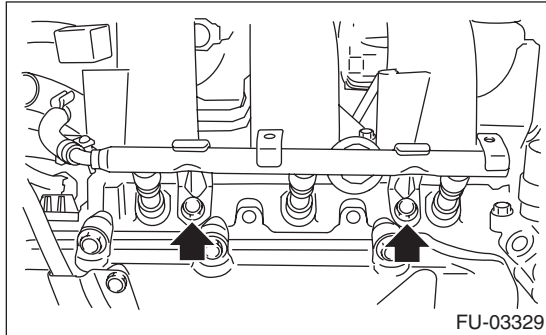

**Tightening torque:**

**19 N·m (1.9 kgf-m, 14.0 ft-lb)**

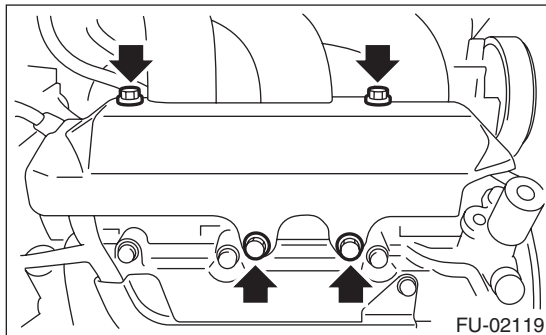

#### 2. LH SIDE


Install in the reverse order of removal.

NOTE:

Use new O-rings.

**Tightening torque:**

**19 N·m (1.9 kgf-m, 14.0 ft-lb)**

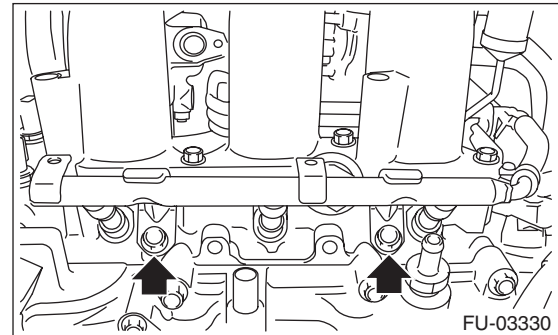

**Tightening torque:**

**19 N·m (1.9 kgf-m, 14.0 ft-lb)**

